

BONNET LOCK

The bonnet lock is situated beneath the centre grille badge. Rotate the badge to one side and operate the locking mechanism with the key provided.

To release the bonnet press the button.

To remove and refit

Remove the spare wheel to obtain access to the lock assembly, by releasing the webbing strap. (See Fig. 37).

Remove the nuts and washers retaining the lock assembly, and withdraw the assembly.

Refitting is the reverse procedure, but check the working of the lock to make final adjustments.

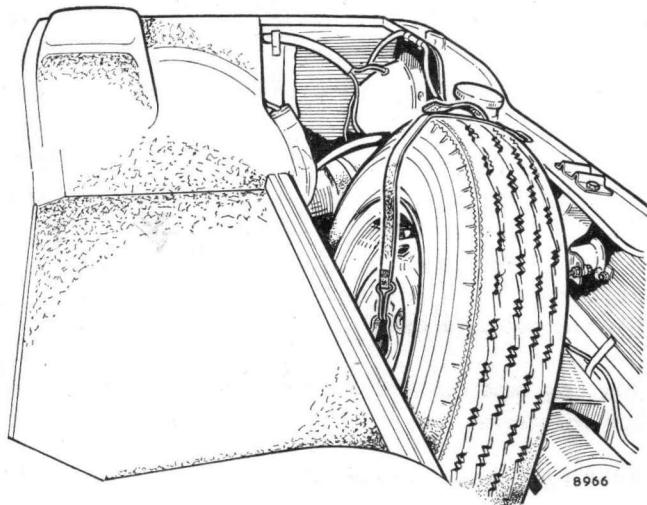


Fig. 37. Showing spare wheel strap