Section	/E	C	4
Section	( Fuel	SVE	Tem

C	ARBURETTOR—continue	ed												Page
	—Adjustments	•••		•••	• • •	•••	•••					•••		17
	—Slow running ac	djustment		•••	•••									17
	—Fast idle position	n—for co	ld star	ting		••••	•••							17
	—Choke valve ret	urn sprin	g—for	extren	ne cold	startin	g	•••	•••				•••	18
	—Removal	•••		•••							•••			18
	—Refitting			•••			•••					•••		18
	—Cleaning		•••	•••	•••	•••			•••	•••	•••	•••		18
	—Jet key—from B30 PIF	IT-2 carbu	rettor				•••				•••			28
C	ARBURETTOR—Type,	Strombe	rg 125	CD-	-Twin		•••			•••	•••		•••	29
Al	IR CLEANER				,									
	—Air intake tube position	n—used v	with Sc	olex ca	rburett	ors	•••	•••	•••	•••	•••			23
	—Filter element—to ren	nove and	replace	-used	with S	Solex c	arbure	ttors			•••			23
	—Air cleaner lower body	y—to rem	ove—l	used w	ith Sole	ex carb	uretto	rs						24
	—Air cleaner—oil bath t	ype—use	with	Solex	carbure	ttors	•••		•••				•••	22
	—Air cleaner—large dry	element	tуре—	used w	ith Sol	ex carb	uretto	rs					•••	22
	—Air cleaner—used with	Strombe	rg twi	n CD d	arbure	ttors	•••						•••	46
19	NEUMATIC OPERATION	ON OF	THR	OTTL	.E						4			
	—Description			•••	•••					•••	•••	•••	•••	25
	—Operation		•••		•••	•••		•••		•••	•••	•••		25
	—Service instructions	•••	•••		•••	•••	•••	•••	•••	•••		•••	•••	25
	—Accelerator pedal asse	mbly—to	remov	e and i	refit	•••			•••		•••	•••		26
	—Air displacer unit—to	dismantle	and re	eassem	ble	•••	•••		•••	•••	•••	•••		26
	—Accelerator pedal—to	remove a	nd refi	t	•••	•••	•••	•••		•••		•••	•••	26
	—Throttle operating uni	t—to rem	ove an	d refit	•••	•••	•••	•••			• • • •	•••	•••	27
C	ABLE OPERATED THE	OTTLE												
	—Description			•••	•••						"	•••	•••	27
	—Inner cable—to adjust		•••			•••	•••	•••	•••		•••	•••	•••	27
	—Cable—to renew		•••	•••	•••	•••	•••	•••	•••	•••		•••	•••	28
													-	
FL	JEL TANK													
	—To remove	•••	•••	•••	•••	•••	•••	•••	•••	•••	•••	•••	•••	28
	—To refit													28