

CARBURETTOR PARTS (See Fig. 14)

1. AIR VALVE PISTON DAMPER ASSEMBLY
2. WASHER FOR DAMPER
3. DAMPER PISTON
4. PISTON RETAINER
5. SCREW AND SPRING WASHER—FOUR USED
6. SUCTION CHAMBER COVER
7. RETAINING RING SCREWS AND SPRING WASHERS—FOUR USED
8. DIAPHRAGM RETAINING RING
9. DIAPHRAGM
10. AIR VALVE PISTON
11. LOCKING SCREW FOR METERING NEEDLE
12. METERING NEEDLE
13. CARBURETTOR BODY
14. CHOKE CABLE BRACKET
15. CHOKE CABLE RETAINING CLIP
16. BRACKET RETAINING SCREW
17. THROTTLE
18. THROTTLE FIXING SCREWS
19. THROTTLE SPINDLE
20. FAST IDLE LEVER
21. LOCKING WASHER
22. EXTENSION NUT—THROTTLE LEVER
23. LOCK NUT—FAST IDLE ADJUSTMENT
24. EXTENSION NUT—STARTER ASSEMBLY
25. LOCKING WASHER
26. SPACING WASHER
27. FAST IDLE CAM
28. FAST IDLE ADJUSTMENT SCREW
29. STARTER ASSEMBLY AND FAST IDLE CAM RETURN SPRING
30. FIXING SCREWS—STARTER ASSEMBLY COVER
31. STARTER ASSEMBLY COVER
32. STARTER ASSEMBLY TRAVEL STOPS, SPRING AND PIN
33. STARTER ASSEMBLY SPRING
34. SPRING RETAINER
35. STARTER ASSEMBLY DISC VALVE
36. GASKET FOR FLOAT CHAMBER
37. SCREW AND SPRING WASHER—LONG, THREE USED
38. SCREW AND SPRING WASHER—SHORT, THREE USED
39. FLOAT CHAMBER
40. WASHER FOR NEEDLE VALVE SEAT
41. FLOAT NEEDLE VALVE AND SEAT
42. JET ADJUSTMENT
43. "O" RING—JET ADJUSTMENT
44. FLOAT FULCRUM PIN
45. FLOAT
46. JET ADJUSTMENT LOCKING DEVICE
47. "O" RING
48. JET BUSHING RETAINING SCREW
49. SLOW RUNNING SPEED ADJUSTMENT SCREW AND SPRING
50. THROTTLE OPERATING LEVER AND CABLE GUIDE
51. THROTTLE LEVER RETAINING NUT
52. SHAKEPROOF WASHER
53. THROTTLE STOP LEVER
54. THROTTLE RETURN SPRING
55. JET
56. JET SPRING
57. WASHER BELOW JET "O" RING
58. "O" RING
59. JET CENTRALISING BUSH
60. BUSHING WASHER
61. AIR VALVE PISTON RETURN SPRING