

Release each door furlex adjacent to the cantrail fillet. Using a thin screwdriver, carefully prise the cantrail fillet retaining clips out of their holes in the cantrail, and remove the fillet. (See Fig. 32).

Repeat these operations on the other side of the car.

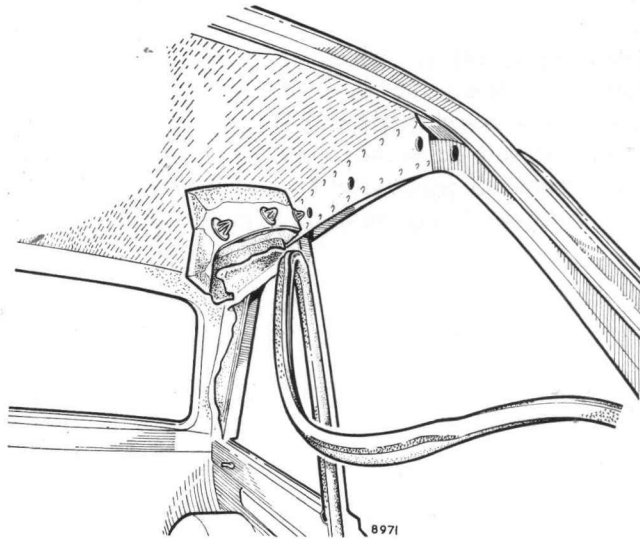


Fig. 32. Remove/refit cantrail fillet

Using the same method, carefully remove the fillet above the backlight. (See Fig. 33).

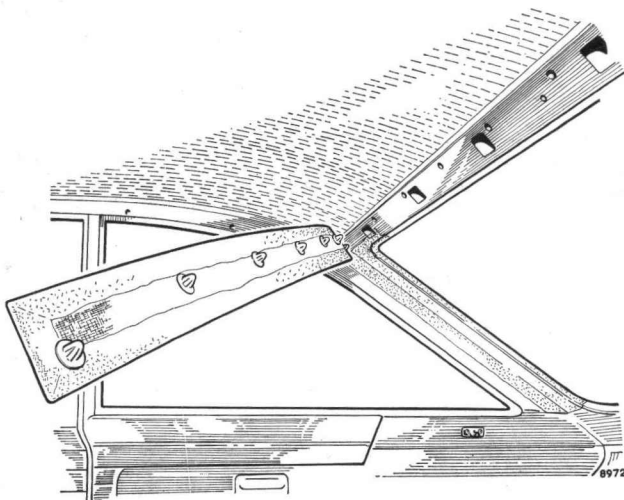


Fig. 33. Remove/refit backlight fillet

Carefully ease the headlining away from the roof panel and remove.

All traces of foam rubber must be removed from the roof panel prior to fixing the new lining.

To refit

Offer up the new lining to the roof panel, and mark it carefully, to ensure that it is fitted in its exact position when the adhesive is applied. Use Bostik IGA. 147 adhesive for the roof lining.

Apply the adhesive to the roof panel only, and when tacky, fit the roof lining, taking care to avoid wrinkling the material.

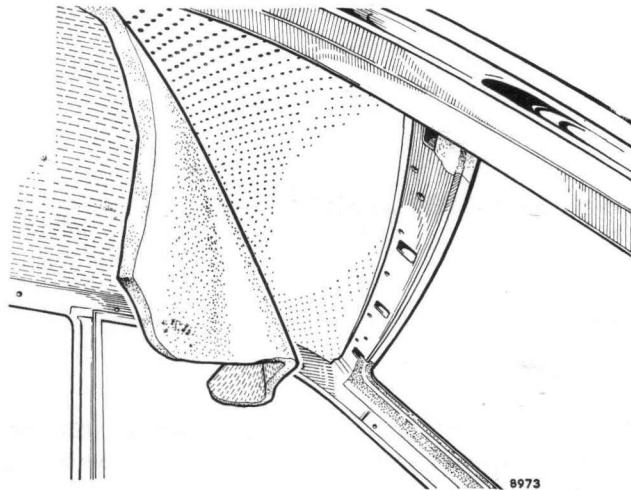


Fig. 34. Remove/refit roof lining

The refitting operation is then a reversal of the removal procedure.

Refer to the appropriate paragraphs for refitting the windscreen and quarter lights.