

COUPE MODELS

GENERAL

All instructions regarding sealing and cleaning, given on Page 4 of this section, must be followed exactly, and are applicable in all cases where glass is fitted to the body shell.

When working on the windscreen, backlight and rear quarter lights, it is preferable to use the services of two operators, one inside and one outside the car.

WINDSCREEN

To remove and refit

The procedure given on Page 4 of this section is applicable, with the exception of the method for removing and refitting the bright beading on the weatherstrip. Remove the beading first, by sliding back the four clips, and prising the beading carefully out of the weatherstrip.

When refitting, fit the weatherstrip to the glass, then fit the beading.

Follow the fitting instructions given on Page 5 of this section.

With the windscreen in position, using a block of wood, tap the corners of the beading in towards the centre of the windscreen, in order to seat the beading fully into the weatherstrip.

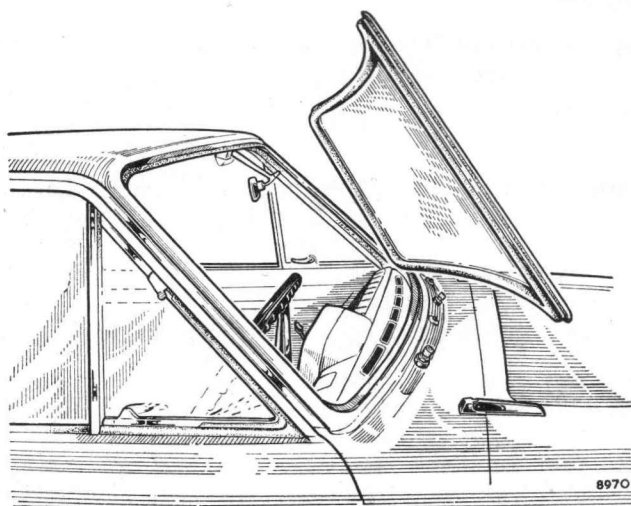


Fig. 28. Windscreen ready for refitting

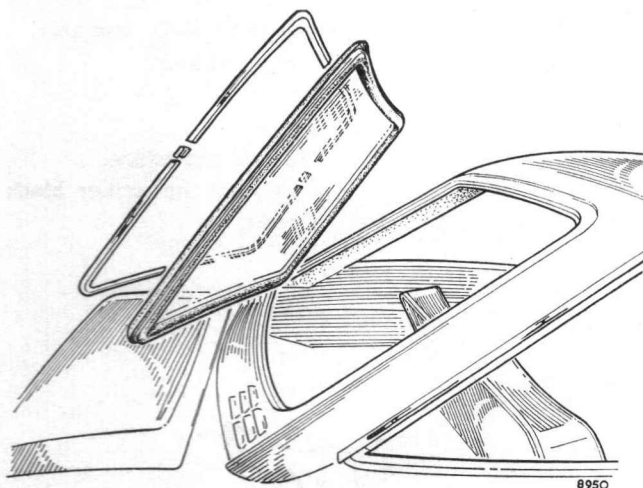


Fig. 29. Backlight with beading removed

BACKLIGHT

To remove and refit

First remove the bright beading, by sliding back the four clips, and prising the beading from the weatherstrip. From inside the car, turn back the lip of the weatherstrip, away from the body flange.

Use small wooden wedges to assist progress, and when sufficient rubber is free, push the glass out from the inside.

For refitting, follow the instructions given for fitting windscreen.